

AsReader

Firmware Update

1. Connect the reader and PC correctly. Do not power on the reader at first. Then Run FlashDemo.exe.
2. Click “Openfile” and select the provided .bin file.

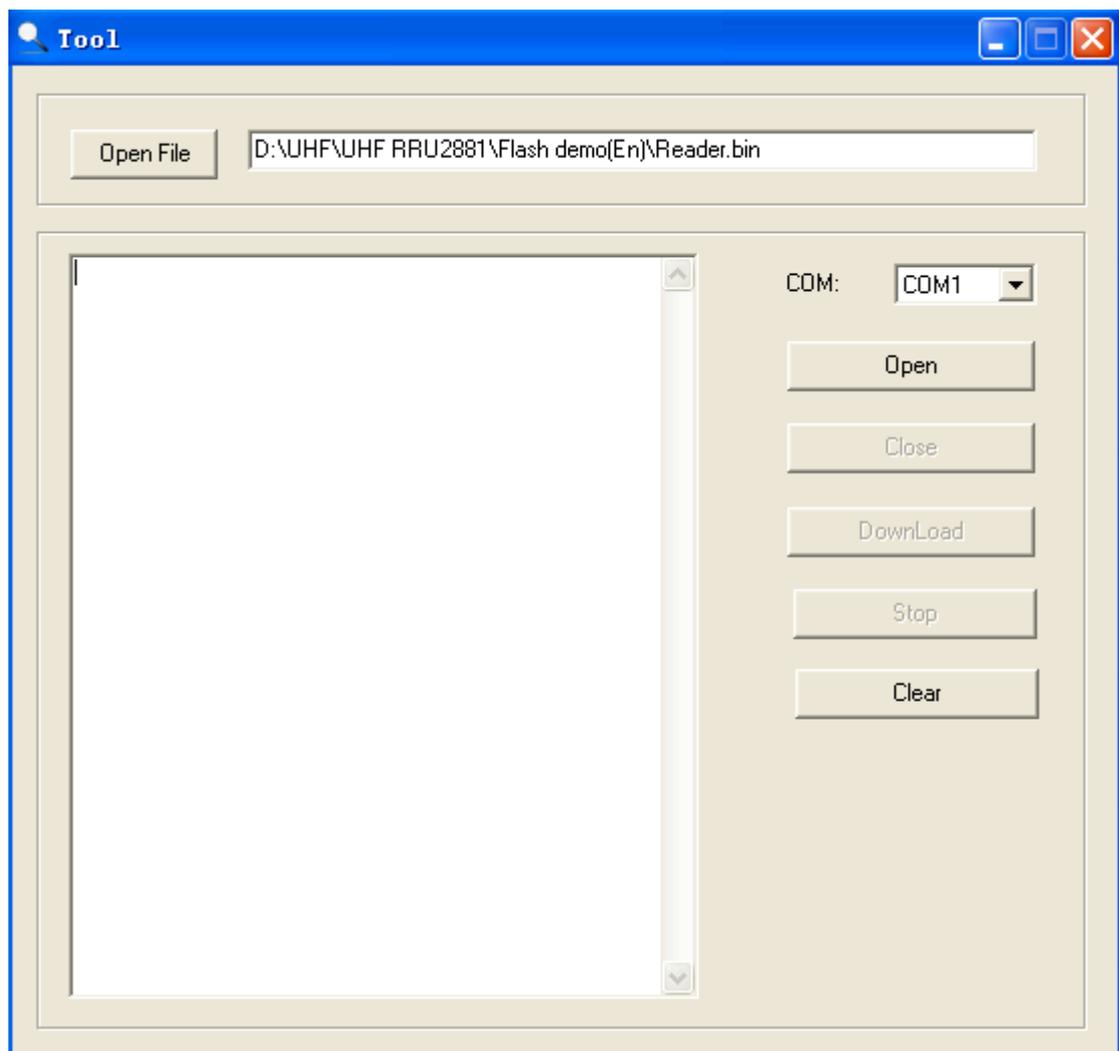


Figure 1

3. Select correct COM port number used and click “Open”. Then click “Download”:

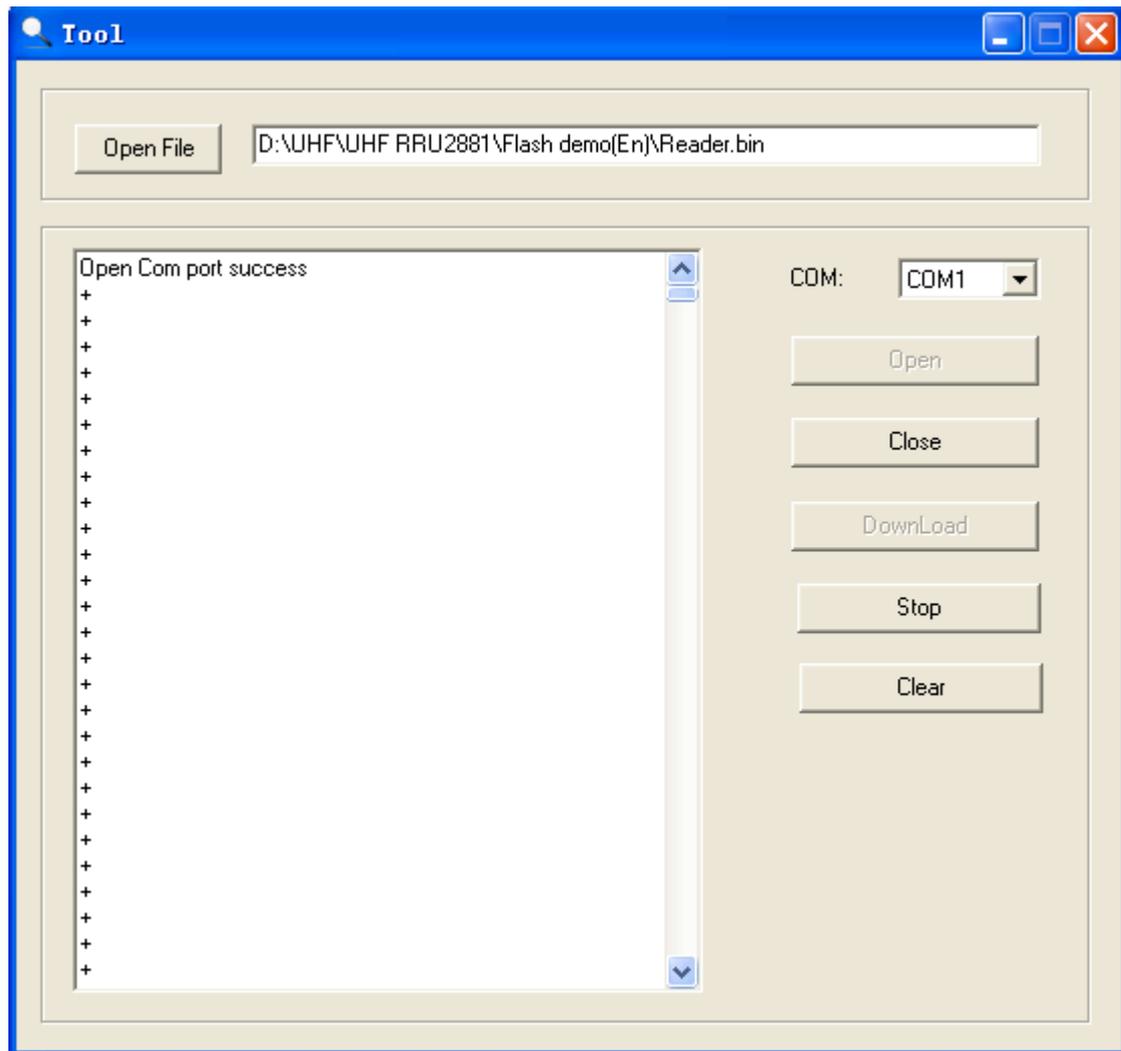


Figure 2

Power on the reader and the reader will enter firmware upgrading procedure.

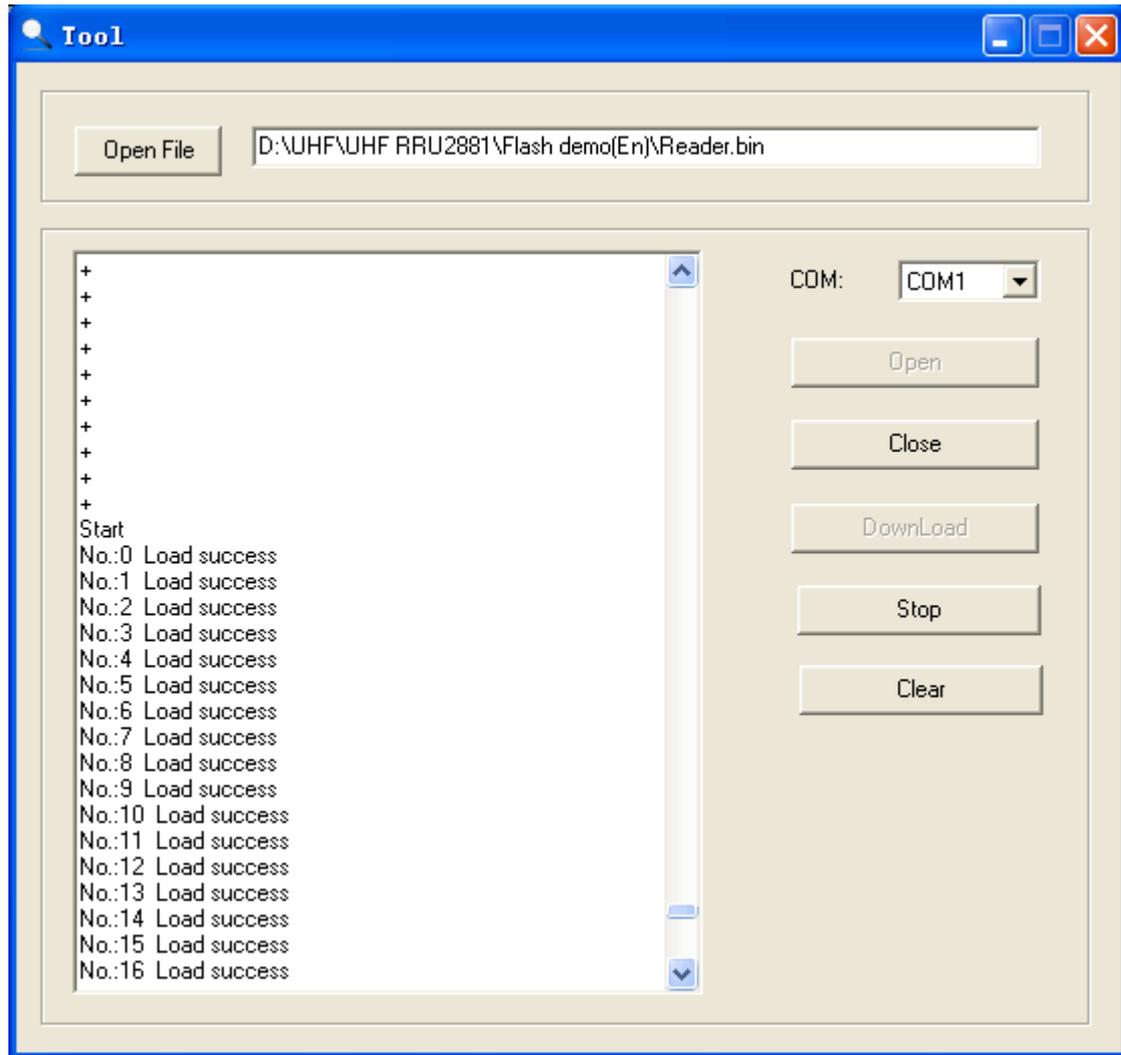


Figure 3

4. When upgrading finished, the interface will be as following:

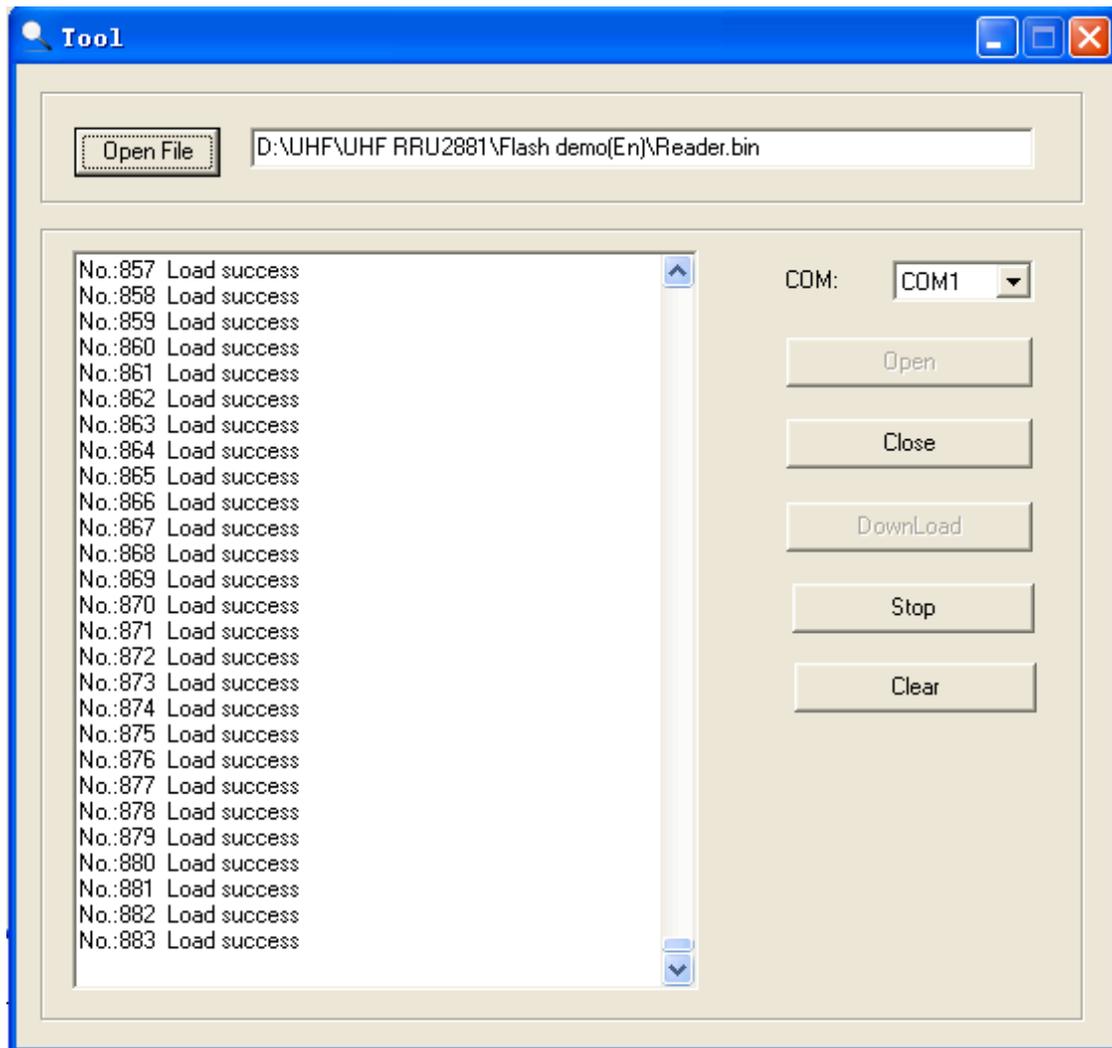


Figure 4